

PEDESTAL BASE

ASSEMBLY FOR 34" FAN



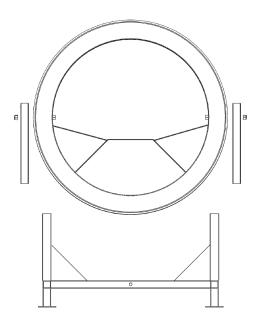

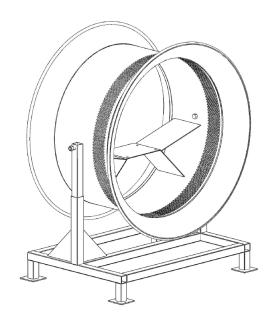

There are many applications for the Patterson Pedestal Base 34" fan. Use care when selecting locations for the fan. Do not place the fan on a sloped surface. Do not use if the OSHA Compliant Patterson finger guards are missing or damaged or not fitted properly. Do not use if the cord or connector has exposed wires or is damaged in any way.

- 1. If you ordered the fan head and the pedestal base together on the same purchase order, they will be shipped from the factory pre-assembled.
- 2. If you ordered these separately, begin mounting the fan head to the pedestal base by first securing the separate PB telescoping upright arms to the fan head stud bolt on either side of the fan housing, leaving them loose for free swinging.
- 3. After attaching the upright arms to the fan head (loosely) using a fork lift to pickup the fan head maneuver the fan head directly over the pedestal base and slowly lower until the upright telescoping arms slip into the fixed uprights of the base.
- 4. Inserted arm should measure 33"-34" in total height from floor, keeping fan level between the two uprights. Some tapping with a block of wood or hammer may be necessary.
- 5. Tighten nuts on stud bolts, connecting the upright arms to the fan head housing.

Note: Due to continual product improvement, items are subject to change without notice.

